

User's Manual
PORTABLE PA SPEAKER SYSTEM
PR-6



IMPORTANT SAFETY SYMBOLS



The symbol is used to indicate that some hazardous live terminals are involved within this apparatus, even under the normal operating conditions, which may be sufficient to constitute the risk of electric shock or death.



The symbol is used in the service documentation to indicate that specific component shall be replaced only by the component specified in that documentation for safety reasons.



Protective grounding terminal



Alternating current/voltage



Hazardous live terminal

ON: Denotes the apparatus is turned on

OFF: Denotes the apparatus is turned off.

WARNING: Describes precautions that should be observed to prevent the danger of injury or death to the operator.

CAUTION: Describes precautions that should be observed to prevent danger of the apparatus.

IMPORTANT SAFETY INSTRUCTIONS

·**Read these instructions.**

·**Keep these instructions.**

·**Heed all warning.**

·**Follow all instructions.**

·**Water & Moisture**

The apparatus should be protected from moisture and rain, can not used near water, for example: near bathtub, kitchen sink or a swimming pool, etc.

·**Heat**

The apparatus should be located away from the heat source such as radiators, stoves or other appliances that produce heat.

·**Ventilation**

Do not block areas of ventilation opening. Failure to do could result in fire. Always install accordance with the manufacturer's instructions.

·**Object and Liquid Entry**

Objects do not fall into and liquids are not spilled into the inside of the apparatus for safety.

·**Power Cord and Plug**

Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, refer to electrician for replacement.

·**Power Supply**

The apparatus should be connected to the power supply only of the type as marked on the apparatus or described in the manual. Failure to do could result in damage to the product and possibly the user.

Unplug this apparatus during lightning storms or when unused for long periods of time.

·**Fuse**

To prevent the risk of fire and damaging the unit, please use only of the recommended fuse type as described in the manual. Before replacing the fuse, make sure the unit turned off and disconnected from the AC outlet.

·**Electrical Connection**

Improper electrical wiring may invalidate the product warranty.

·**Cleaning**

Clean only with a dry cloth. Do not use any solvents such as benzol or alcohol.

·**Servicing**


Do not implement any servicing other than those means described in the manual. Refer all servicing to qualified service personnel only.

·**Only use accessories/attachments or parts recommended by the manufacturer.**

·**Warning**

Please remember the high sound pressure do not only temporarily damage your sense of hearing, but can also cause permanent damage. Be careful to select a suitable volume.

1. ACTIVE SPEAKER SYSTEM

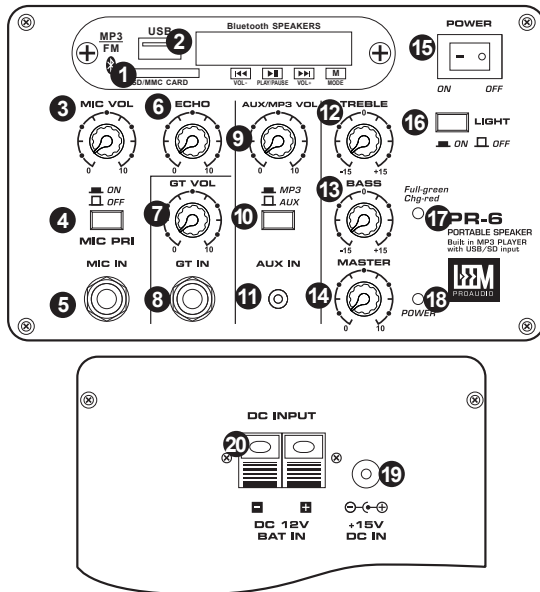

1. SD Input

A SD Connector for auxiliary signal input and MP3 player.

2. USB Input

A USB Connector for auxiliary signal input and MP3 player.

3. MIC input

Plug a mic directly into this port for public address usage and let your voice be heard. (No phantom power)

4. Mic prior switch

Use this switch to control if you want to use this prior function or not

5. Microphone input

Allows you to connect a microphone with a 6.3mm connector

6. ECHO effect control

Use this control to set the ECHO effect.

7. Guitar volume control

Use this control to set the volume level of Guitar

8. Guitar input

Allows you to connect a Guitar with a 6.3mm connector.

9. MP3/AUX volume control

This knob is used to control volume for the AUX IN and MP3 Player.

10. AUX/MP3 toggle switch

If you are using USB, SD at the Mp3 player, press the switch down to select the Mp3 response curve. If you are using by the Aux input. Leave the switch up to select the Aux response curve.

11. AUX input

Connect a CD player, digital media player, mixer or other media source to these inputs.

12. TREBLE control

This knob is used to regulate the amount treble applied to the output signal.

13. BASS control

This knob is used to regulate the amount bass applied to the output signal.

14. MASTER volume control

This control enables you to adjust the total volume level.

15. POWER switch

This power switch turns on the system. Remember to adjust the volume level to the lowest setting before turn on the power switch.

16. LED light on/off switch

17. Charging indication

The red light indicates in charge, the green light means the battery is full

18. Power LED

Lights up when the device is turned on.

19. DC 15V IN

Connect the included power cord to the 15V AC-DC ADAPTOR input connector before push off the power switch.

20. 12V BATTERY IN

Before connecting the external 12V battery the power switch is Off.

2. SPECIFICATIONS

	PR-6
MIC in	1
GT in	1
EQ	Treble, Bass, ± 15 dB
Mp3 Player	Support U flash Disk, Support MP3&WMA Music Format, FM Radio, Build Bluetooth Module, Build Party Light Control
Array Party Light	RGB LED
Power	25W RMS
Peak Power	50W
Frequency Response	50Hz-20KHz ± 1 dB
THD	<0.1% 20Hz-20KHz
Battery	lead battery 4.5AH
Speaker	LF: 8" HF: 4"
AC Input	AC100-240V 50/60Hz
Dimension(WxDxH)	395x310x540mm
Weight	9.1kg